


 0	0		
8	9	7	
		A	
		В	
		C	
		D	
	1	E	
		F	
 REV NO:	1		
CREATION DATE:	11/05/2016		
REV DATE:	25/05/2016		
DRAWN BY:	R BARNES		
CHECKED BY: SHEET NUMBER:	2 OF 5	M BRADLEY 2 OF 5	
,			

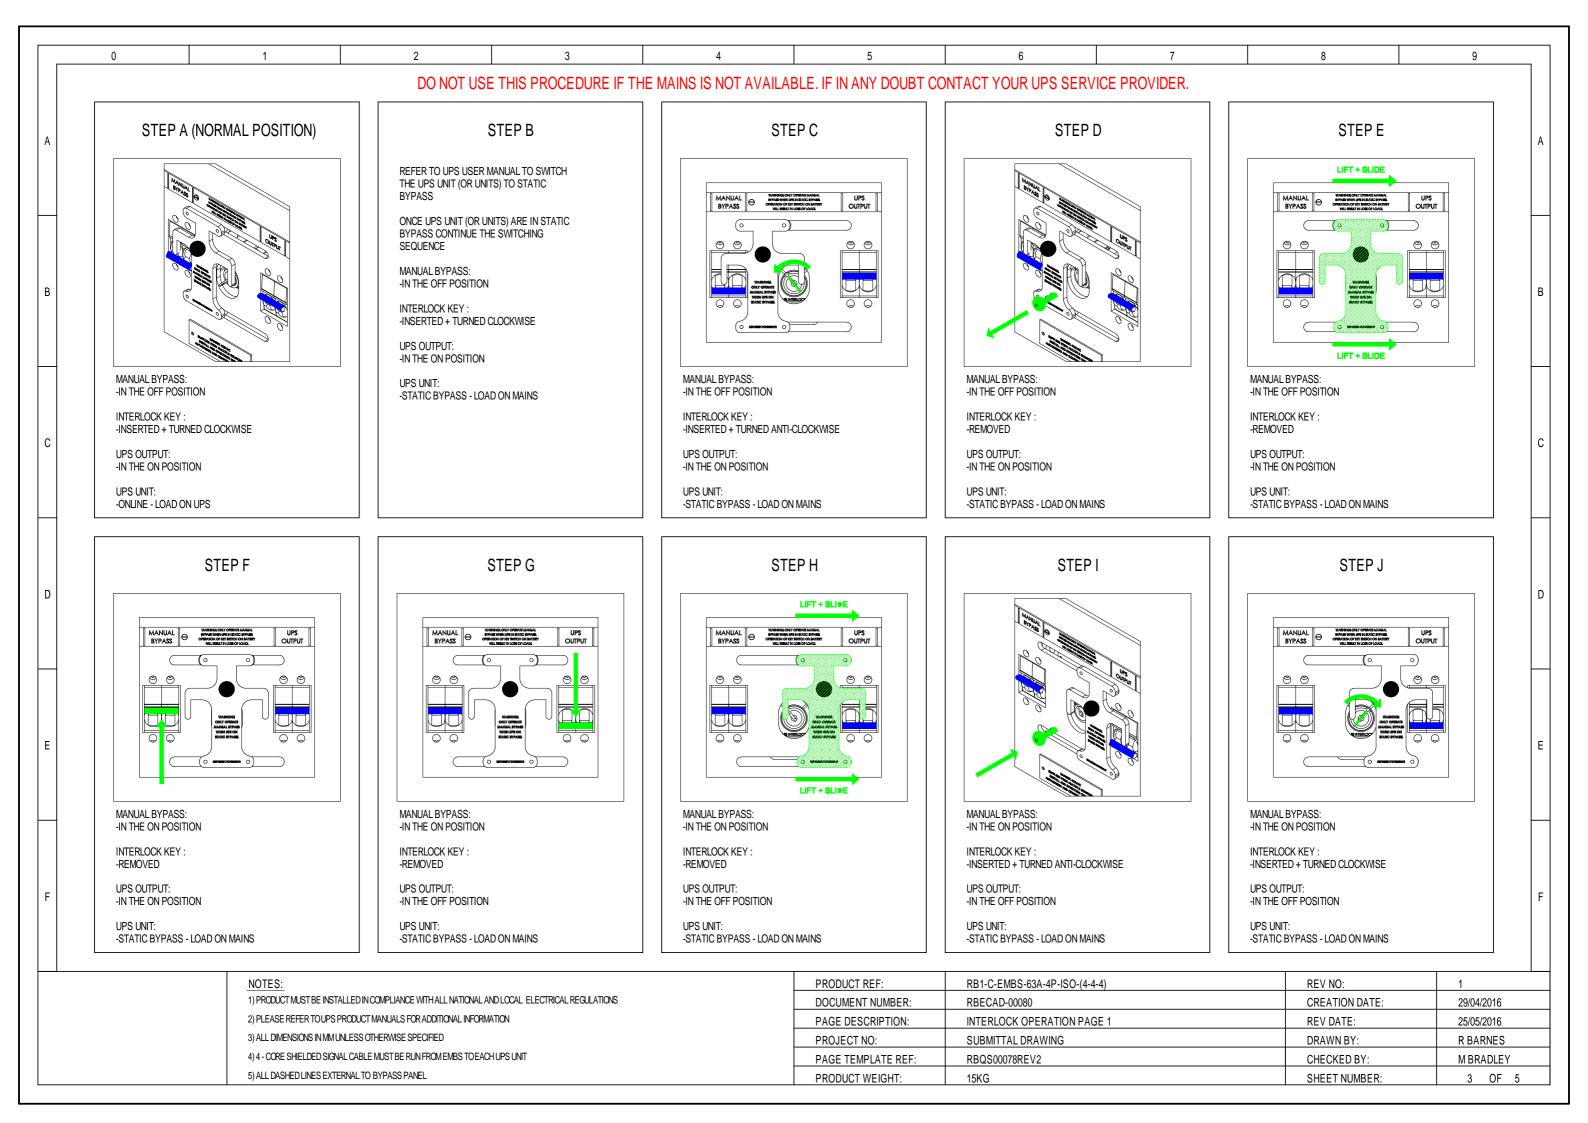

			ê 7		
0 1	DO NOT USE THIS PROCEDURE IF 1	4 5 IF MAINS IS NOT AVAILABLE. IF IN ANY DOUBT	0 1	8 9	
]]
STEP K (ON BYPASS POSITI	ON) STEP L	STEP M	STEP N	STEP O	
THIS PROCEDURE ASSUMES:			LIFT + SLIDE		
ALL SWITCH'S ON THE EMBS AND ON THE UPS UNIT SHOULD STILL BE AS PER STEP J ON THE PREVIOUS PAGE PRIOR TO PROCEDING					
THE UPS UNIT SHOULD BE IN STATIC BYPASS AND SHOULD BE READY TO ACCEPT THE SYSTEM LOAD IF IN ANY DOUBT CONTACT YOUR UPS SYSTEM SERVICE PROVIDER					
BEFORE PROCEDING MANUAL BYPASS: -IN THE ON POSITION	MANUAL BYPASS:	MANUAL BYPASS:	LIFT + SLIDE MANUAL BYPASS:	MANUAL BYPASS:	
INTERLOCK KEY : -INSERTED + TURNED CLOCKWISE	-IN THE ON POSITION	-IN THE ON POSITION	-IN THE ON POSITION	-IN THE ON POSITION	
UPS OUTPUT:	INTERLOCK KEY : -INSERTED + TURNED ANTI-CLOCKWISE	INTERLOCK KEY : -REMOVED	INTERLOCK KEY : -REMOVED	INTERLOCK KEY : -REMOVED	
-IN THE OFF POSITION	UPS OUTPUT: -IN THE OFF POSITION	UPS OUTPUT: -IN THE OFF POSITION	UPS OUTPUT: -IN THE OFF POSITION	UPS OUTPUT: -IN THE ON POSITION	
UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	
	-STATIC BTPASS - LOAD ON MAINS	-STATIC BYPASS - LUAD ON MAINS	-STATIC BYPASS - LOAD ON MAINS	-STATIC BTPASS - LOAD ON MAINS	1
STEP P	STEP Q	STEP R	STEP S	STEP T	
				REFER TO UPS USER MANUAL TO SWITCH THE UPS UNIT (OR UNITS) TO ONLINE MODE ONCE UPS UNIT (OR UNITS) ARE ONLINE	
				THE SEQUENCE IS COMPLÈTE AND THE LOAD IS NOW BACKED UP BY UPS IF IN ANY DOUBT CONTACT YOUR UPS SERVICE PROVIDER	
				MANUAL BYPASS: -IN THE OFF POSITION INTERLOCK KEY : -INSERTED + TURNED CLOCKWISE	
MANUAL BYPASS: -IN THE OFF POSITION	MANUAL BYPASS: -IN THE OFF POSITION	MANUAL BYPASS: -IN THE OFF POSITION	MANUAL BYPASS: -IN THE ON POSITION	UPS OUTPUT: -IN THE ON POSITION	
INTERLOCK KEY : -REMOVED	INTERLOCK KEY : -REMOVED	INTERLOCK KEY : -INSERTED + TURNED ANTI-CLOCKWISE	INTERLOCK KEY : -INSERTED + TURNED CLOCKWISE	UPS UNIT: -ONLINE - LOAD ON UPS	
UPS OUTPUT: -IN THE ON POSITION	UPS OUTPUT: -IN THE ON POSITION	UPS OUTPUT: -IN THE ON POSITION	UPS OUTPUT: -IN THE OFF POSITION		
UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS		
NOTES:		PRODUCT REF:	RB1-C-EMBS-63A-4P-ISO-(4-4-4)		
	T BE INSTALLED IN COMPLIANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL REGULATIONS	DOCUMENT NUMBER:	RBECAD-00080	CREATION DATE: 29/04/201	16
2) PLEASE REFE	R TO UPS PRODUCT MANUALS FOR ADDITIONAL INFORMATION	PAGE DESCRIPTION:	INTERLOCK OPERATION PAGE 2	REV DATE: 25/05/201	16
3) ALL DIMENSIONS IN MM UNLESS OTHERWISE SPECIFIED		PROJECT NO:	SUBMITTAL DRAWING	DRAWN BY: R BARN	ES
4) 4 - CORE SHIELDED SIGNAL CABLE MUST BE RUN FROM EMBS TO EACH UPS UNIT		PAGE TEMPLATE REF:	RBQS00078REV2	CHECKED BY: M BRAD	
5) ALL DASHED L	NES EXTERNAL TO BYPASS PANEL	PRODUCT WEIGHT:	15KG	SHEET NUMBER: 4 C	JF

