


8	9
	A
	B
	c
	D
	E
	F
	'
REV NO:	1
CREATION DATE:	25/05/2016
REV DATE:	25/05/2016
DRAWN BY:	R BARNES
CHECKED BY:	MBRADLEY



					I							
	0	1	2 3	4	5	6	7	8	9	_		
		DO NOT USE THIS PROCEDURE IF THE MAINS IS NOT AVAILABLE. IF IN ANY DOUBT CONTACT YOUR UPS SERVICE PROVIDER.										
	STEP K (ON BYPASS POSITION) STEP L		ST	EPM	STEP N		STEP O					
A						UTEL N				A		
	THIS PROCEDURE ASSUMES: ALL SWITCH'S ON THE EMBS AND ON THE UPS UNIT SHOULD STILL BE AS PER STEP J ON THE PREVIOUS PAGE PRIOR											
					ANNI I							
_					STP-ASI O							
	TO PROCEDING											
	THE UPS UNIT SHOULD I						1	WAANINGLCHECK PROCEDURE ONEY OPERATE INTERLOCK WINE WYS ON STATIC FIFYASE				
	BYPASS AND SHOULD B ACCEPT THE SYSTEM L		NU ARMAG CHIECE MOCEDURE NUT OFFICE EXCE TOTALS							Ь		
	IF IN ANY DOUBT CONTA	ACT YOUR							1	P		
	UPS SYSTEM SERVICE I BEFORE PROCEDING	PROVIDER			Dury 0 *							
	MANUAL BYPASS:		OUTPUT									
	MANUAL BYPASS: -IN THE ON POSITION INTERLOCK KEY : -INSERTED + TURNED CLOCKWISE		MANUAL BYPASS: -IN THE ON POSITION -IN THE ON POSITIO			MANUAL BYPASS: -IN THE ON POSITION		MANUAL BYPASS: -IN THE ON POSITION				
	UPS OUTPUT:		INTERLOCK KEY : -INSERTED + TURNED ANTI-CLOCKWISE	INTERLOCK KEY : -REMOVED		INTERLOCK KEY : -REMOVED		TERLOCK KEY : EMOVED				
	-IN THE OFF POSITION		UPS OUTPUT:	UPS OUTPUT:		UPS OUTPUT:		S OUTPUT:		C		
	UPS UNIT: -INVERTER RUNNING - L(-IN THE OFF POSITION	-IN THE OFF POSITION		-IN THE OFF POSITION		THE ON POSITION				
			UPS UNIT: -STATIC BYPASS - LOAD ON MAINS	UPS UNIT: -STATIC BYPASS - LOAD O	N MAINS	UPS UNIT: -STATIC BYPASS - LOAD ON MAINS		'S UNIT: TATIC BYPASS - LOAD ON MAINS				
L												
			STEP Q		EP R STEP S			STEP T				
D										D		
							тн	FER TO UPS USER MANUAL TO SWITCH E UPS UNIT (OR UNITS) TO ONLINE				
					SANUAL SYPASIO							
-							тн	ICE UPS UNIT (OR UNITS) ARE ONLINE E SEQUENCE IS COMPLETE AND THE				
								AD IS NOW BACKED UP BY UPS				
								IN ANY DOUBT CONTACT YOUR UPS RVICE PROVIDER				
:								NUAL BYPASS:		F		
					o the state			THE OFF POSITION				
						MANUAL BYPASS:		TERLOCK KEY : SERTED + TURNED CLOCKWISE				
	MANUAL BYPASS: -IN THE OFF POSITION INTERLOCK KEY : -REMOVED UPS OUTPUT: -IN THE ON POSITION UPS UNIT: -STATIC BYPASS - LOAD ON MAINS		MANUAL BYPASS:	MANUAL BYPASS:]			UPS OUTPUT:				
]			-IN THE OFF POSITION INTERLOCK KEY : -REMOVED UPS OUTPUT: -INSERTED + TURNED AN UPS OUTPUT:			-IN THE ON POSITION		-IN THE ON POSITION				
					TI-CLOCKWISE INTERLOCK KEY : -INSERTED + TURNED CLOCKWISE UPS OUTPUT:							
								-ONLINE - LOAD ON UPS				
			-IN THE ON POSITION	-IN THE ON POSITION		-IN THE OFF POSITION						
			UPS UNIT: UPS UNIT: -STATIC BYPASS - LOAD ON MAINS -STATIC BYPASS - LOA		UPS UNIT: -STATIC BYPASS - LOAD ON MAINS							
	NOTES:				PRODUCT REF:	RB1-EMBS-63A-1P-ISO		REV NO:	1			
	 1) PRODUCT MUST BE INSTALLED IN COMPLIANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL REGULATIONS 2) PLEASE REFER TO UPS PRODUCT MANUALS FOR ADDITIONAL INFORMATION 3) ALL DIMENSIONS IN MM UNLESS OTHERWISE SPECIFIED 4) 4 - CORE SHIELDED SIGNAL CABLE MUST BE RUN FROM EMBS TO EACH UPS UNIT 5) ALL DASHED LINES EXTERNAL TO BYPASS PANEL 				DOCUMENT NUMBER:	RBECAD-00081 INTERLOCK OPERATION PAGE 2 SUBMITTAL DRAWING PROS000789EV2		CREATION DATE:	29/04/2016			
					PAGE DESCRIPTION:			REV DATE:	25/05/2016			
					PROJECT NO: PAGE TEMPLATE REF:			DRAWN BY: CHECKED BY:	R BARNES M BRADLEY			
					PAGE TEMPLATE REF: RBQS00078REV2 PRODUCT WEIGHT: 20KG			SHEET NUMBER:	4 OF 5	5		
		·										

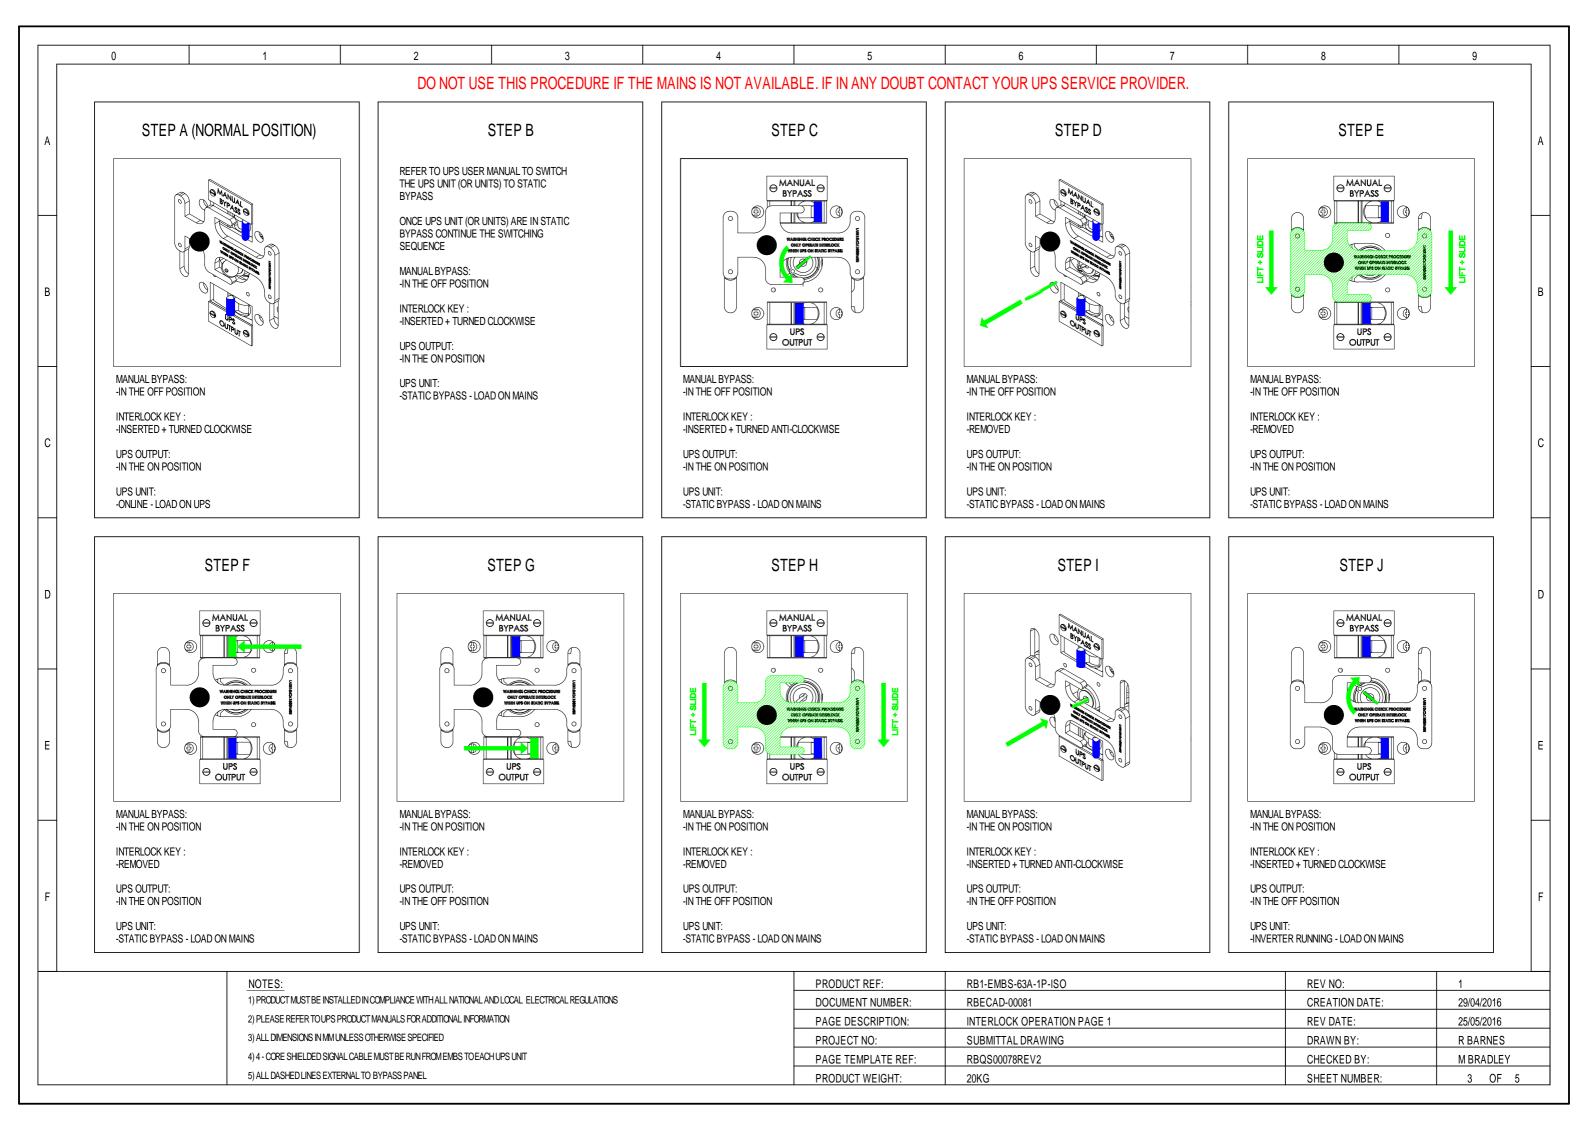